SKYSPANSHADE
COMMERCIAL UMBRELLAS AND SHADE STRUCTURES

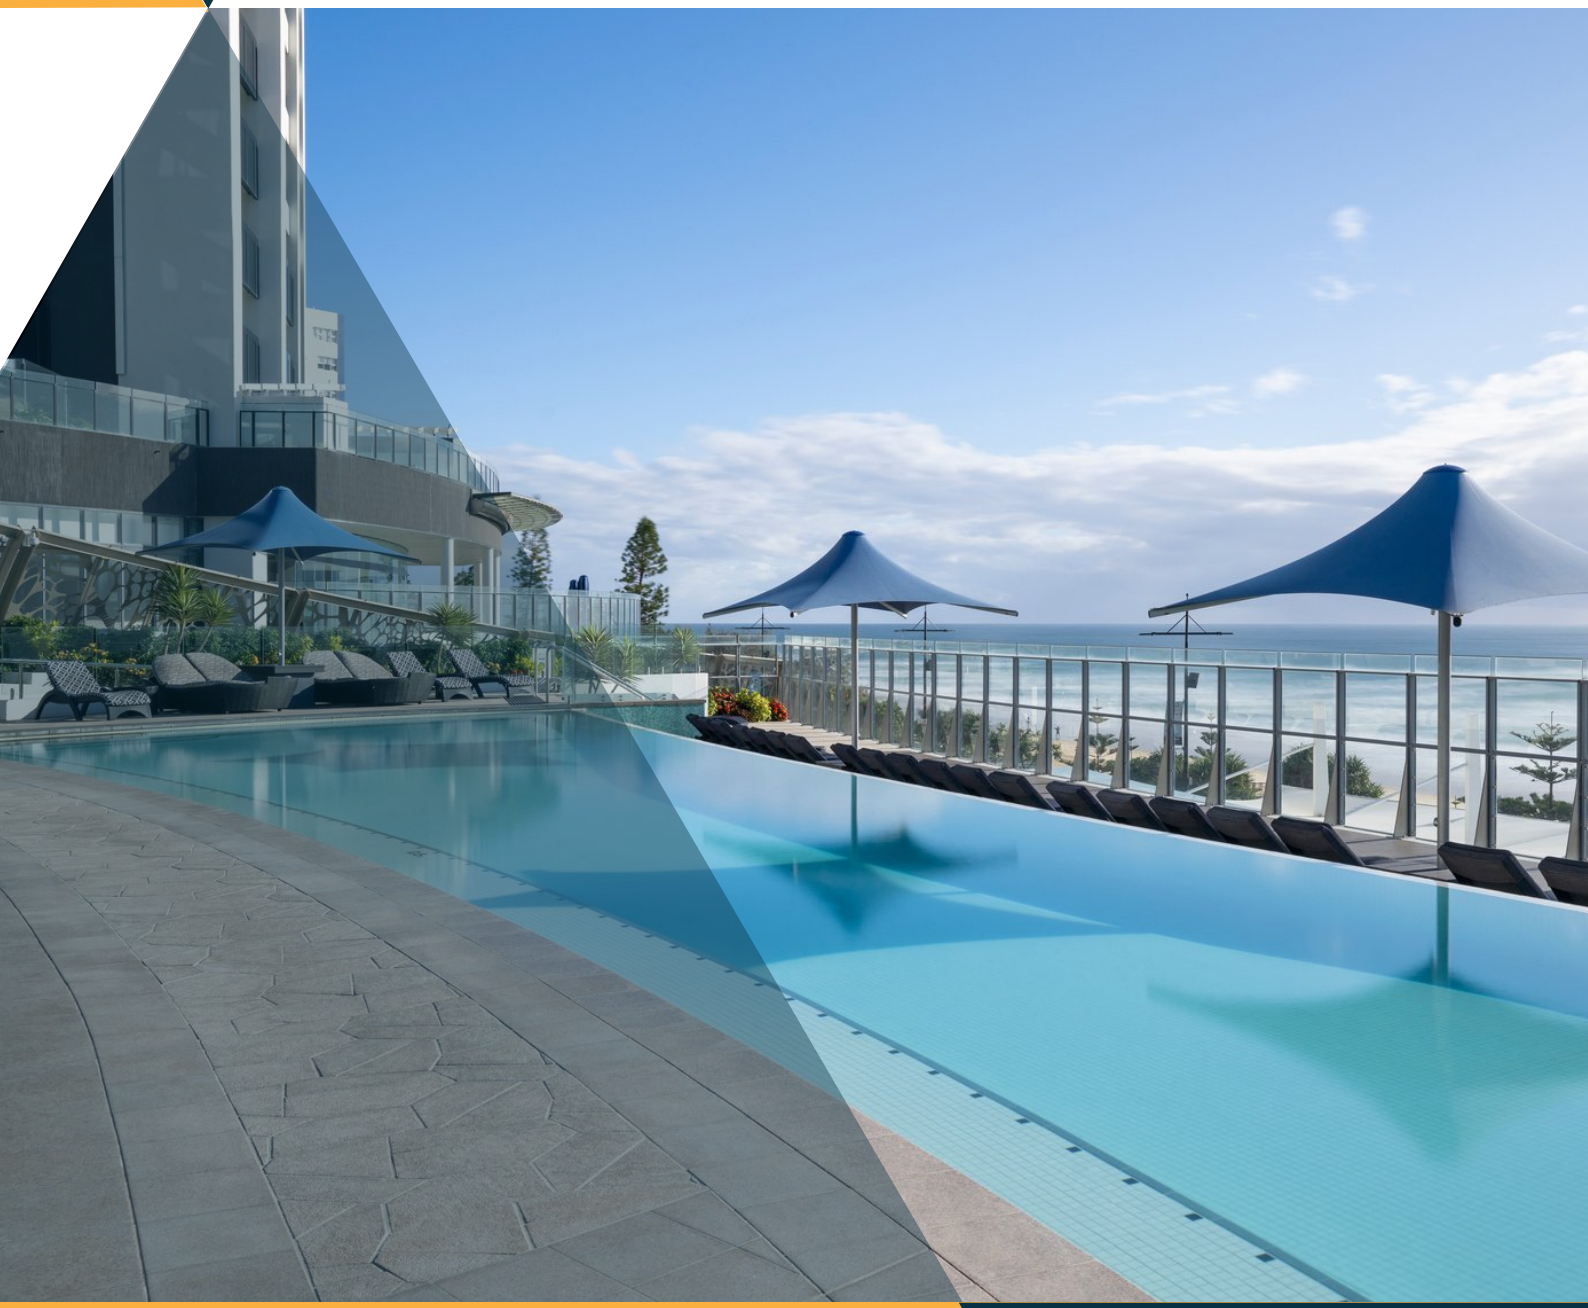

Sunset Umbrella

Maintenance

Sunset Umbrella
Maintenance Schedule

This should be carried out bi-annually

1. Check that canopy edge cable is seated in plates correctly (the cable should be in between the intermediate plate and the corner plate bolt).

2. Nuts and bolts should be checked and tightened as needed using 13mm spanners.

3. Fabric is positioned correctly over top plate.

4. Bolts at base plate are tightenedas needed using a 19mm socket (you may need to remove plastic plug to reach nuts).

5. Jack and winding mechanism lock travel freely, (by winding umbrella up and down).

6. Using a grease gun, apply grease directly through the winding keyway. Approximately 2 squirts of grease per 5 turns of the mechanism, until the jack has been travelled at least 1 full cycle.

7. Check corner bolts that hold canopy down and tighten (using a 5mm Allen key).

8. Insert handle an push all arms from column. wind umbrella to the stop, then wind to nearest lock off position to engage anti-creep latch.

SKYSPAN SHADE
Office / Factory Unit 1, 4 Old Pacific Highway, Yatala, Queensland 4207, Australia
Tel: +61 (0) 7 3804 6288 Email: sales@skyspanshade.com.au
www.skyspanshade.com.au